



ADS315 KEY Programming

Instruction

1. Remove the battery cover of the old remote to reveal the 9 dip switches
2. Use a slotted screwdriver to twist/pry open the case of new remote (see the right picture) to reveal the 9 dip switches
3. Set the position of each of the nine DIP switches in NEW remote opposite to the setting in in the OLD remote. For example if switch #1 is "on" or "+ve" it should be set to "off" or "-ve" in the NEW remote. The same applies to setting all nine DIP switch settings. However, if any of the nine switch is set to the middle or "neutral" position in the OLD remote, then it should be kept in the "middle" or "neutral" position in the NEW remote.

