

Programming B&D remote directly to motor

1. Locate the Code Set button on your motor. Some motors have a see-through plastic cover of the buttons, if so, please remove this
2. Press the Code Set button on the motor once and immediately release. A red light on the motor will illuminate.
3. Press and release the button on the new remote you wish to code to the motor for 1-2 secs and the light on the motor will begin to flash.
4. Press the same button on the new remote and the light on the motor will stop flashing. The remote is now programmed and will be able to operate the door

www.magickey.com.au