Boss3B & 2211-L Transmitter instruction

Thank you for purchasing from us.

Programming the transmitter code into the drive unit to activate

- 1. Push RADIO SET BUTTON at the back of drive unit –Courtesy light will come on.
- 2. Push handset button you wish to operate the door. Courtesy light will flash twice
- 3. Now test by pressing the button on the transmitter.

Deleting all transmitter codes

1. Hold RADIO SET BUTTON in for 5 seconds, All memories of your remotes (include

lost remotes) will be deleted - Courtesy light will flash 7 times.

2. Test by pressing Button on a previously coded transmitter-the motor should not

respond.

www.magickey.com.au