

Boss2 boss4 Boss6 Boss 2211-L (i.e. Boss 4) Transmitter instruction



Thank you for purchasing from us.

Programming the transmitter code into the drive unit to activate

1. Push RADIO SET BUTTON at the back of drive unit –Courtesy light will come on.
2. Push handset button you wish to operate the door. Courtesy light will flash twice
3. Now test by pressing the button on the transmitter.

Deleting all transmitter codes

1. **Hold RADIO SET BUTTON in for 5 seconds**, All memories of your remotes (include lost remotes) will be deleted – Courtesy light will flash 7 times.
2. Test by pressing Button on a previously coded transmitter-the motor should not respond.

www.mkey.com.au