

B&D433 REMOTE INSTRUCTION



How to store the transmitter code:

The opener can only operate from transmitters that have been programmed into its receiver. The receiver needs to learn the codes of any transmitter that will be used with the opener. Up to fourteen (14) codes can be stored in the receiver's memory.

- a. Ensure that the battery is inserted into the transmitter.
- b. Press the CODE SET button and release. The CODE SET LED will illuminate to indicate the opener is in Code Learn mode. If a valid code is not stored within 15 seconds the opener will exit Code Learn.
- c. Press the transmitter button (one of four) that you want to control the door. The CODE SET LED will begin to flash.
- d. Press the same transmitter button again. The CODE SET LED will illuminate for one second and then go out.
- e. The transmitter is now coded to operate the door - press the button to test.

How to erase programmed codes:

If the CODE SET button is pressed and held for 6 seconds the CODE SET LED will blink rapidly for one second to indicate that all programmed codes have been erased.

