

## Centurion Instruction

### Set the security code

The security code • dip' switches or • rolling' switch are located behind the snap off cover on the right hand side of the motor head.

- Dip switches(if applicable)

The 12 switches are pre - set in the factory in the • on' position. Set the switches in a random pattern of your choice. The switches in the hand transmitter are located under the battery cover on the back of the transmitter. Set the switches to correspond with patterns in the motor head.

- Rolling switches(if applicable)

The security code • rolling' switch should be operated as follows:

1. Press and release black programming button located on receiver board. (Red Pilot light will begin to flash) .
2. Press hand transmitter button for 1 sec and then release. (Red pilot light will stop flashing) .
3. Press hand transmitter button for another 1 sec and then release. (Red pilot light will flash for approximate 3 sec) .
4. When red pilot light stops flashing the programming sequence is complete. To program additional transmitters repeat steps 1-5.

Deleting stored codes: Your security code system will store up to 7 transmitter codes. If more than 7 transmitters are programmed, the system will systematically start to delete the previously programmed transmitter. (i. e. transmitter 8 is programmed then No.1 will drop out. If 8, 9, 10 are programmed the 1,2, 3 will drop out etc. )

To delete all stored codes: Simply press and hold the programming button, red pilot light will come on. When red pilot light switches off, all previously programmed transmitters will have been deleted.