


FORZA


REMOTE PROGRAMMING INSTRUCTIONS

The Forza 2000 remote replaces the earlier Forza 1000 remote.

1 PROGRAMMING AT THE DOOR OPENER

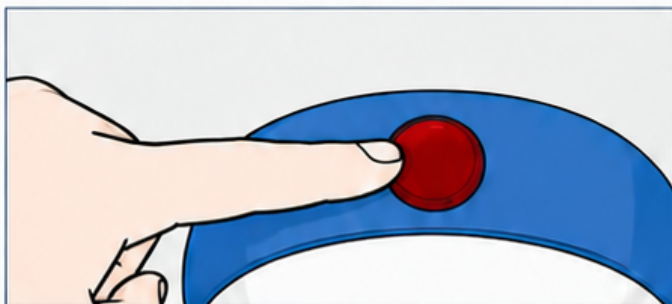

Press the dark red button on the motor housing to release the cover.

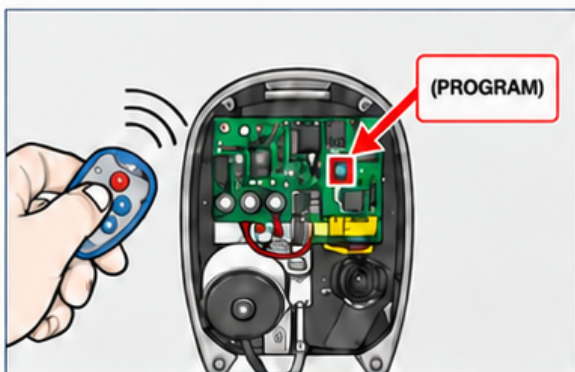


2. Locate the receiver board inside the opener. Press the S1 (PROGRAM) button once.
3. Press the chosen button on the new remote control twice.
4. Test the remote operation, then refit the opener cover.

2 MAIN ENTRY DOORS / SEPARATE RECEIVERS


In apartment buildings, the S1 (PROGRAM) button may be on a separate receiver installed near the door drive unit. See examples below.



Separate receiver (closed)

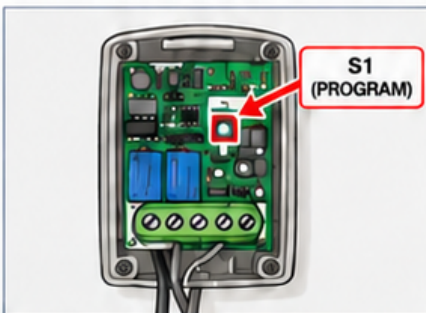

Separate receiver (open)

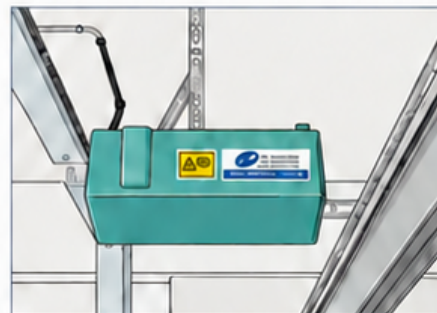

Receiver location near door drive unit

Find the S1 button inside the receiver, then follow Steps 2-4 above.



BUTTON BATTERY SAFETY WARNING

Keep button/coin batteries away from children.

If this remote uses a button/coin battery, swallowing the battery or placing it inside the body can cause severe internal burns and may be fatal in as little as 2 hours. Keep new and used batteries out of reach of children.

If a battery may have been swallowed or inserted, seek immediate medical help.

In Australia, call the Poisons Information Centre on 13 11 26.