

CHAMBERLAIN™

GRIFCO

CG844 Transmitter

Please read and understand these instructions.

CG844 Transmitter Programming Guide

Note: Ensure the WP jumper is removed from the receiver card when programming or erasing remotes and re-fitted on completion. Power should be turned off when removing and fitting.

Front Panel Learn (Bulk learn via eDrive Controller)

Note: only applicable with MRC2 & MCB-MK3 or MCB4

- Press and hold SET, then whilst holding...
- Press Stop 5 times (green light will flash indicating learn mode)
- Press button on transmitter to learn (orange light will flash fast after each learn)
- To program additional transmitters simply press the desired channel button on each additional remote
- Press STOP to exit learn mode

Front Panel Erase (Bulk erase via eDrive Controller)

CAUTION: this will erase all transmitters (WP Jumper must be removed)

- Press and hold SET, then whilst holding...
- Press the STOP button 4 times, holding on the fourth press for 5 seconds (orange light will flash to indicate erase request, then green light will flash to indicate completion)

Learning URC2 or RRC2 (Universal Receiver Card or Relay Receiver Card)

Onboard Button Learn

(compatible with MRC2, URC2 & RRC2)

- Press and release the "program button" on the receiver card (red light will come on)
- Press desired transmitter channel button (green light will flash)

Repeat process until all required transmitters are programmed. This process must be followed if MRC2 is installed on MCB-MK1 or MK2 (green or blue MCB type)

Onboard Button Erase

CAUTION: this will erase all transmitters (WP Jumper must be removed)

- Press and hold "program" button on the receiver card until red light goes out (approximately 10 seconds).

NOTE: WP (Write protect) jumper disables learn and delete function.

Chamberlain Australia Pty Ltd
P.O. Box 1446 Lane Cove NSW 1595
www.chamberlainanz.com

© 2011 Chamberlain Group, Inc.

