

CAD605C Instruction

Your original remotes:



The new one your get from us:

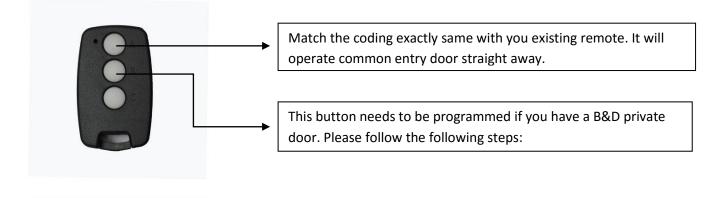

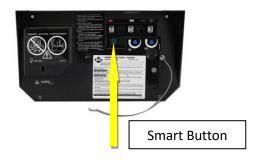

- Press and **hold** the **B** button on the remote
- Press and release the Green 'Smart button'
- Release the B Code button The transmitter has been programmed into the opener

To Erase All Programmed Codes

• Press and hold the green 'Smart Button' until the green indicator light turns off (approx 6 seconds). All Codes are erased.