

Merlin M832, M842, M844 Coding Instructions

Step 1 - find the learn button

Overhead & Tilt Door Openers

1. Unit with 5 exposed terminal screws at the rear
 - Remove the small black cover to the right of the terminal screws, and find the red LEARN button under the black cover
2. Unit with 4 terminal screws at the rear (possibly covered with a plastic panel)
 - Remove the lamp cover; and then remove the red or green control panel cover. Find the small button marked LEARN
3. Unit with 4 covered terminal screws at the rear and a Merlin wired wall switch
 - The small button on the Merlin WALL SWITCH is the LEARN button

Roller Doors

1. Single small square red button on the front:
 - Remove the lamp cover & remove the small black cover to the left of the lamp holder. The LEARN button the red button under the black cover
2. Large red or green push-switch on front
 - Remove the red or green control panel cover to expose the small button marked LEARN
3. Large red or green push switch on front and a Merlin wired wall control switch
 - The small button on the Merlin wall switch is the LEARN button

On other receivers

1. Dark grey boxed receiver with a large round green button
 - The LEARN button is the small dark grey button inside the green button

Gate Receiver Cards

The LEARN button is the small switch on the PCB marked LEARN. Otherwise, see your receiver's user guide, or inspect for a button marked LEARN.

Step 2 - pairing your new remote to your opener

1. Press the learn button for 1 - 2 seconds
2. The courtesy lamp will start flashing & clicking to indicate that you are in LEARN MODE
3. Press any button on your new remote control for 2 seconds, and then let go. And then press the same button again for 2 seconds and then let go.
4. Test your new remote

Deleting Codes

If you ever want to delete all of the codes in your receiver, do the following:

1. Press LEARN button for about 11 seconds
2. The lamp will flash slowly & switch off
3. All remotes are now deleted!