

Magickey Garage Remote Programming Instruction -

MK100 MK200 MK300 MK700

- **Step 1:** Press and release the Learn button in the middle of the receiver box → LED will flash
- Step 2: Press and release any desired button on the new remote -> LED on receiver will be steadily on

Step 3: Press and release the SAME button on the new remote again -> LED will flash quickly \rightarrow When the LED stops flashing and is steadily on, programming is complete. Press the programmed button to test.



How to delete the stored codes?

Press and hold the LEARN button on the receiver for 10 sec, all the stored codes on this receiver will be erased. The remotes can then be reprogrammed following the above steps

www.mkey.com.au

Leading remote solutions