Magickey Programming Instruction MPC3 MPC4 Key

Two methods:

A. If you have an old working remote.

- 1. Remove the battery cover of the old remote to reveal the 9 dip switches
- 2. Use a slotted screwdriver to twist/pry open the case of new remote (see the right picture) to reveal the 9 dip switches



- 3. Set the position (ON/OFF) of each dip switch of the NEW remote exactly the same as those in the old remote.
 - → The code setting is complete, press button on new remote to test.

B. If you don't have any working remote.

- 1. Randomly set the positions of the 9 dip switches of the NEW remote
- 2. Remove the cover at the lower part of the wall control unit MPC3 to reveal the "CODE SET" button. If your opener is MPC4 you can locate CODE SET button at the back of unit which is near ceiling.
- 3. Press "CODE SET" button for one second
- 4. Press the button on the new remote → Programming is done, press new remote to test