



MPC3 & MP4 Key Programming Instruction

➤ If you have an old working remote →

1. Remove the battery cover of the old remote to reveal the 9 dip switches
2. Use a slotted screwdriver to twist/pry open the case of new remote (see the right picture) to reveal the 9 dip switches
3. Set the position (ON/OFF) of each dip switch of the NEW remote exactly the same as those in the old remote. The 9th dip switch plays the role as the side switch on your old remote. → The code setting is complete, press button on new remote to test.



➤ If you don't have any working remote →

1. Randomly set the positions of the 9 dip switches of the NEW remote
2. Remove the cover at the lower part of the wall control unit to reveal the "CODE SET" button
3. Press "CODE SET" button for one second
4. Press the button on the new remote → Programming is done, press new remote to test