

Marantec Digital 302 DIRECT Remote – Programming

Use this method if you do not have an existing working remote.

Before You Start

- Ensure you are on a safe, stable surface to reach the opener's control panel.
- Keep the new remote handy.

Steps

1. Locate the **P** Button on the Opener

Usually found under the light cover or on the back panel of the opener.

2. Programming

- Press and hold the **P button** for about **3–5 seconds**, until the indicator light changes to the next status.
- Release the button.
- Quickly press the **P button twice** (within 1 second each).
- The **signal indicator** will flash, showing the opener is ready to learn a remote.
- Press and hold the button on the new remote for **1 second**.
- If the indicator flashes rapidly, the code has been stored successfully.
- Press the **P button once** to exit and save settings.

www.magickey.com.au