

PentaFOB® Programming Instructions

Coding the PentaFOB® remotes and receivers can be done in 2 different ways.

- A. Using the Receiver
- B. Using another Remote Control

A. Coding using the Receiver

1. Check that all switches are “OFF” on the receivers 12-way dip switch
2. Press and hold the program button on the receiver
3. Press the remote button for 2 seconds, receiver LED will flash and then turn Green
4. Release the button on the receiver and the remote
5. Press remote control button to test the receiver output

B. Coding using another Remote Control

1. Open the case of a remote control that is already programmed and press and release the program button on the back of the board
2. Press the new remote control button for 2 seconds
3. Press the new remote control button again to test the receiver output

Deleting Receivers Memory

Short the Code Reset pins on the receiver for 10 seconds. This will delete all the remotes from the receiver's memory.

PentaFOB® Programmer

This programmer allows you to add and delete certain remotes from the receiver memory. This is used when a remote control is lost or a tenant moves from the premises and the owner wants to prevent un-authorized access.

PentaFOB® Backup Chips

This chip is used to backup or restore the contents of a receiver. When there are 100's of remotes programmed to a receiver the installer normally backups the receiver memory in case the receiver is damaged.