

Access the control panel on the motor, you may need to remove the light diffuser cover on some models

To code a new Transmitter, press and release the "CODE" button. "Su" will be displayed on the LED screen.

Press the button you wish to code on your new remote 2 times

"Su" will flash on the LED display then change to "- -".

This indicates the transmitter code is now stored.

The remote will now open the door using the button you just coded

**TIP: If the remote will not program:** Try code a different remote button, try them all if necessary, one will code in, it may be the top button or left button etc.