

## **STODDART 3B 4B Set the security code**

1. Press and release black programming button located on receiver board. (Red Pilot light will begin to flash) .
2. Press hand transmitter button for 1 sec and then release. (Red pilot light will stop flashing) .
3. Press hand transmitter button for another 1 sec and then release. (Red pilot light will flash for approximate 3 sec) .
4. When red pilot light stops flashing the programming sequence is complete. To program additional transmitters repeat steps 1-5.

To delete all stored codes: Simply press and hold the programming button, red pilot light will come on. When red pilot light switches off, all previously programmed transmitters will have been deleted.