


Coding ZT07/ZTWB/DM01 Remote Control 433MHz Hand Transmitters

Steel-Line SD800 Sectional Garage Door Opener*

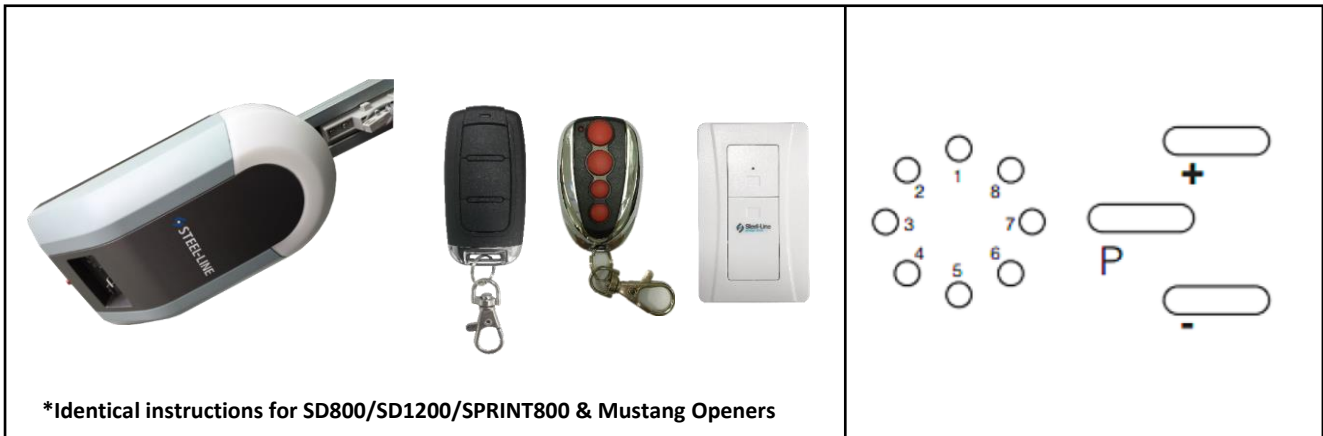

1. Additional transmitters can be coded as follows:

- ❖ Press and hold the “P” and “+” buttons until all lights turn on and LED 7 flashes.
- ❖ Press the “+” button once (*all LED lights turn off except LED 7*).
- ❖ Quickly press and release the required push button on your remote twice (*all LED lights turn on and LED 7 will begin flashing*).
- ❖ Press the “P” button once to save (*LED 3 will switch on indicating that the remote has been successfully programmed*).

Repeat above procedure for all additional handsets.

Note: A maximum of 10 codes can be learned by the opener. If you attempt to code more than 10 transmitters the oldest code will be delete. *N.b. some earlier models can only accept 6 codes.*

2. Deleting transmitters:

Note: This procedure will clear all programmed remotes, wireless wall buttons and wireless keypads from the opener.

- ❖ Press and hold the “P” and “+” buttons until all lights turn on and LED 7 flashes.
- ❖ Press and hold the “-” button until LED 7 turns off and begins flashing again.
- ❖ Press the “P” button once to save (*LED 3 will switch on indicating that all codes have been deleted and that the opener is now in normal operating mode*).

Coding ZT07/ZTWB/DM01 Remote Control 433MHz Hand Transmitters

Steel-Line RD800 Roller Door Opener



1. Additional transmitters can be coded as follows:

- ❖ Press the “LEARN” button once (*LEARN LED will turn on and unit will beep three times*).
- ❖ Within 10 seconds, press and release the required push button on your remote once.
- ❖ All LED’s will switch off indicating that the transmitter has been successfully programmed.
- ❖ If the transmitter has already been memorized by the opener the unit will beep twice.

Repeat above procedure for all additional handsets.

If you fail to press the transmitter button whilst in coding mode within 10 seconds, the opener will automatically return to standby mode.

Note: A maximum of 15 codes can be learned by the opener. If you want to program another transmitter and the memory is already full you will need to clear all data and program transmitters again.

2. Deleting transmitters:

Note: This procedure will clear all programmed remotes, wireless wall buttons and wireless keypads from the opener.

- ❖ Press and hold the LEARN button for seven seconds (*LEARN LED will turn on with three beeps, unit will beep another two times followed by one long beep*).
- ❖ All LED’s will switch off indicating that all codes have been deleted and that the opener is now in normal operating mode.