



## Garage Remote Control Programming Instruction

---

### **SUPERLIFT6**



**Step 1:** Locate the **CODE SET/LEARN** button on the control panel or circuit board of the motor

**Step 2:** Press and release the CODE SET/Learn button → LED will begin to flash

**Step 3:** Press any desired button on the new remote for 1 sec then release → LED will be off

**Step 4:** Press the same button on the remote in Step 3 for 1 sec then release → LED will flash again

**Step 5:** When LED stops flashing, the programming is complete → Press the programmed button to test whether it works. If no success, please repeat the above steps.



## Garage Remote Control Programming Instruction

---

### **SUPERLIFT6**



**Step 1:** Locate the **CODE SET/LEARN** button on the control panel or circuit board of the motor

**Step 2:** Press and release the CODE SET/Learn button → LED will begin to flash

**Step 3:** Press any desired button on the new remote for 1 sec then release → LED will be off

**Step 4:** Press the same button on the remote in Step 3 for 1 sec then release → LED will flash again

**Step 5:** When LED stops flashing, the programming is complete → Press the programmed button to test whether it works. If no success, please repeat the above steps.