




TECHNICAL BULLETIN

Code Handset (Transmitter) to Receiver

GTS 2000™ Tilt and Sectional Door Automatic Operator

TB-SDROCGN0906- GTS 2000™


Issue Date: October 2006

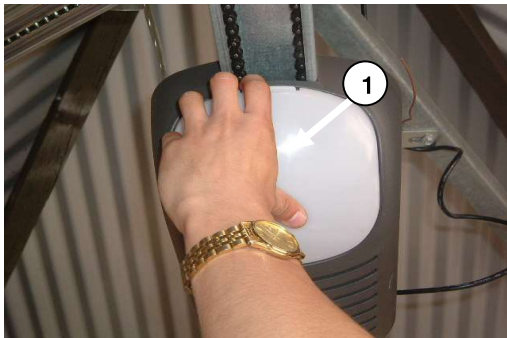


Title: GTS 2000™ CODE HANDSET TO RECEIVER

Each standard receiver can be configured to accept codes from ten separate handset units

1. Carefully remove the light cover by pulling down on tab near front of unit

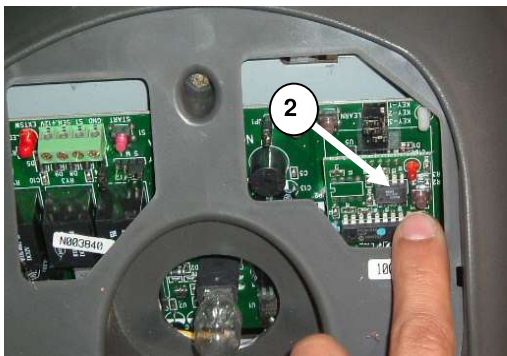

2. Press the receiver button once (located on receiver board as shown)
 - A red light will illuminate

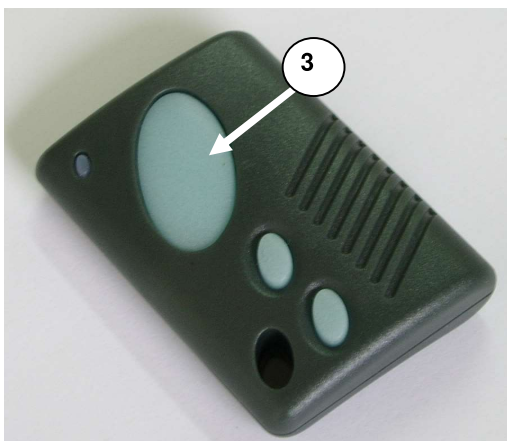

3. Press large button on the handset once and hold until red-light on receiver board turns off
 - This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.




Opening doors around the world
©GLIDEROL GARAGE DOORS PTY. LTD



TECHNICAL BULLETIN


Code Handset (Transmitter) to Receiver GTS Tilt and Sectional Door Automatic Operator

Caution: Always disconnect power before making any setting changes

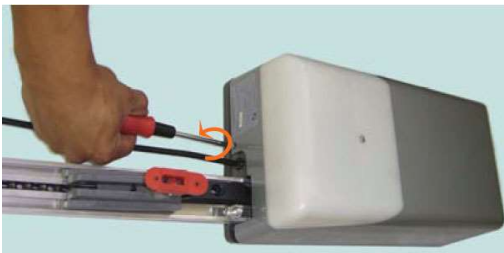


Title : GTS - CODE HANDSET TO RECEIVER

1. Remove or loosen the screw on the GTS cover using screw driver

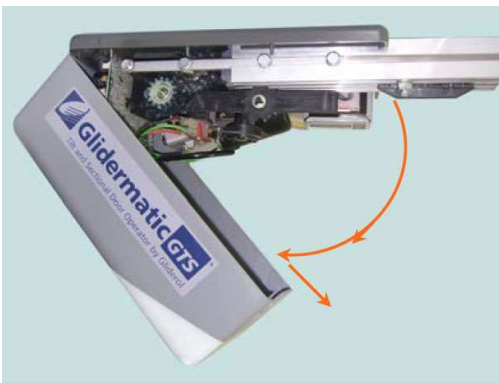

2. Remove the GTS cover by pulling in the directions of arrows as shown in the figure
3. Press the LREAN button on receiver once (locate on receiver board as shown)

A red light will illuminate on the receiver board

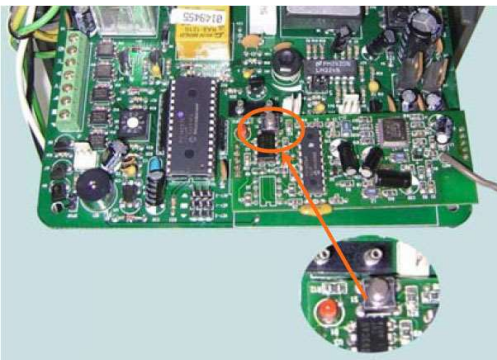

NOTE: The receiver picture may vary depending on the model of the receiver compare to the picture shown in the figure

4. Press and hold large button on the handset once until red-light on receiver board turns off

This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)



Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.



Opening doors around the world
©GLIDEROL GARAGE DOORS PTY. LTD