


Garage Remote Programming Instructions

Programming and deleting remote controls

Use the control panel on the garage door motor. The **CODE** button is highlighted in blue in the line drawing below.

Programming a Remote

1. Press the CODE button once, then release it immediately. A dot will appear in the corner of the display.
2. On the new remote, press and hold the button you want to program for two seconds, then release it. Repeat this two-second press once more.
3. On the second press, the dot will go out and then begin to flash. This indicates that the remote has been programmed successfully.
4. Repeat these steps to program any additional remotes.
5. Test each remote before completing the setup.

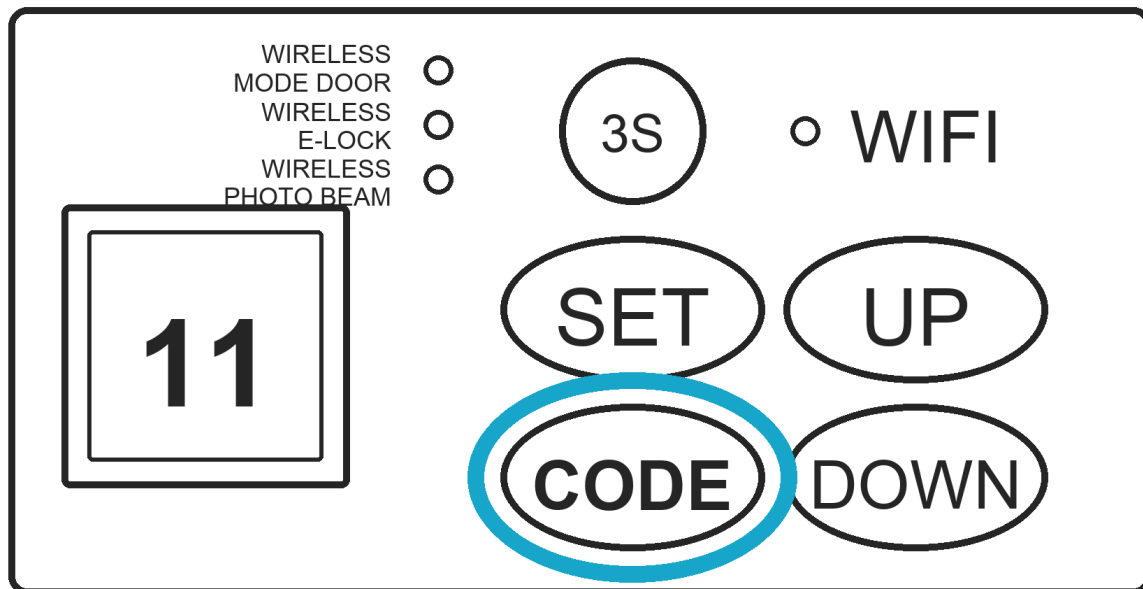

Control panel line drawing

Deleting All Remotes

Press and hold the CODE button on the motor. Do not release it until the letter C appears on the display. This indicates that all remotes have been removed from the motor.

Battery Safety Warning

This product may contain a coin or button cell battery. Keep the product and batteries away from children. A swallowed or internally lodged battery can cause severe or fatal injuries in two hours or less. Seek immediate medical attention if ingestion or internal placement is suspected.