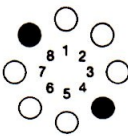

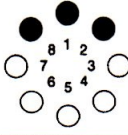

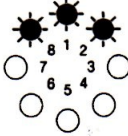
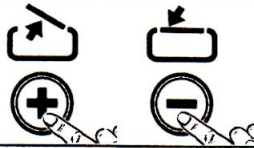
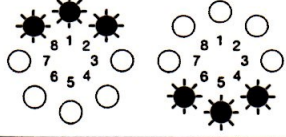

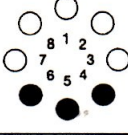

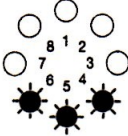
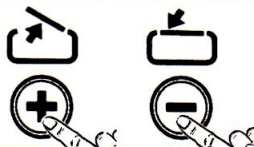
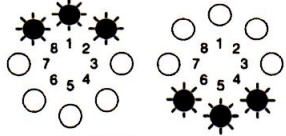

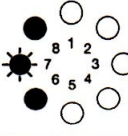



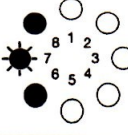



8. Initial operation

 <p>Operating mode</p>	1.	<p>1x >2s <10s</p> 	<p>Start express programming / Programme the door OPEN end position</p>	
	2.		<p>Drive the door to the OPEN position</p>	
	3.		<p>Correct the OPEN door position using (+) and (-)</p>	
	4.	<p>1x <1s</p> 	<p>Save the OPEN door position / Programme the CLOSED door position</p>	
	5.		<p>Drive the door to the CLOSED position</p>	
	6.		<p>Correct the CLOSED door position using (+) and (-)</p>	
	7.	<p>1x <1s</p> 	<p>Save the CLOSED door position / Programme the remote control</p>	
	8.		<p>Press the hand transmitter button</p>	
	9.		<p>Release the hand transmitter button</p>	
	10.	<p>1x <1s</p> 	<p>Save the remote control settings / End the express programming procedure</p>	