

# PTX2 / PTX5 INSTRUCTION

## Method 1.

### Directly Coding

This method is simple to do, and is suitable for most of private garage doors, as long as you can reach the control panel.

if you live in a block of unit, or it is for a sliding gate or swing gate, then you cannot find control panel. please refer to method 2 to do the program then.

- Press and hold the **DOOR CODE** button (Fig. 1). **Door code button is located on the control panel of the motor (drive unit)**
- Press one of the four buttons on the transmitter for two (2) seconds, pause for two (2) seconds, then press the same button again for two (2) seconds.
- Release the **DOOR CODE** BUTTON
- Press the transmitter button to test.

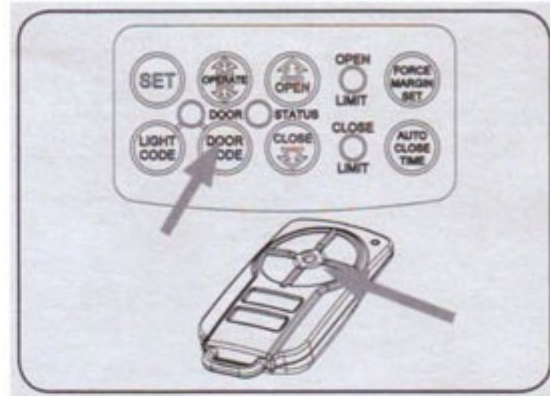


Fig.1

## Method 2.

### Remotely Coding

Using this method transmitters can be coded without access to the opener's control panel as long as a precoded transmitter is available.

**IMPORTANT NOTE:** The door or courtesy light must activate when the steps below are performed. This indicates that the pre-coded transmitter is in range of the opener, and the correct button has been pressed.

- Take any pre-coded transmitter. Press the button for the function to be duplicated and release.
- Using a small needle, press and hold firmly for two seconds through the Coding Hole (Fig. 2)
- WITHIN 10 SECONDS** take the additional transmitter you wish to code. Decide which button that you want to activate the function to be duplicated (e.g. activate the door, or turn on the courtesy light)
- Hold the new transmitter's button for two seconds, pause for two seconds, hold again for two seconds and then release.
- Wait for 10 seconds and then press the new transmitter's button to test.

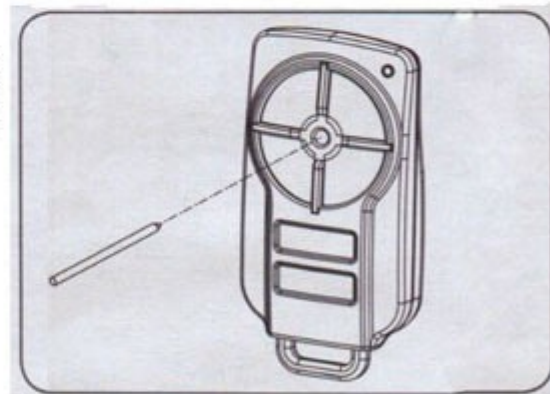


Fig.2