

Firmadoor 27MHZ replacement instruction

Thank you for your purchase



FMD-1


MK127

The remote **Firmadoor** 27 mhz, is already obsolete, and the current replace model is MK127. However before you use new model you need to set up the coding by following the instruction below

If you still have the old remote control

Please open the battery cover of both remote controls and replicate the position of the 12 sequence number from the old remote to the new one (i.e . 12 DIP switches) in reverse order. For example, if the position of sequence number 1 of **Firmadoor** is down, the position of sequence number 12 of MK127 should be down.

Eg:

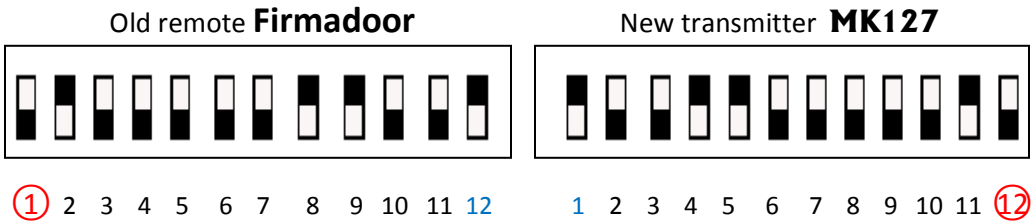

Mirror reverse

If you lost your old remote control

If you don't know the coding, you lost your old transmitters or you would like change the coding, to locate the code need to take off the white light cover see fig.below. the code is a 12 DIP switches in the small window. Indicated by the arrow in the below picture.

To set up the code also need to be mirror reverse. For example, if the position of sequence number 1 of **Firmadoor** is down, the position of sequence number 12 of MK127 should be down.

