



Superlift Garage Remote Control Programming Instruction

1. Press and release black programming button located on receiver board. (Red Pilot light will begin to flash)
2. Press hand transmitter button for 1 sec and then release. (Red pilot light will stop flashing)
3. Press hand transmitter button for another 1 sec and then release. (Red pilot light will flash for approximate 3 sec)
4. When red pilot light stops flashing the programming sequence is complete. To program additional transmitters, repeat steps 1-5.

To delete all stored codes: Simply press and hold the programming button, red pilot light will come on. When red pilot light switches off, all previously programmed transmitters will have been deleted.