Instruction of Gliderol 701/Gliderol 702 Conversion Kit


1.

Please check your receiver board, which should be shown the same as the picture on the right




2. As you can see, the receiver of Gliderol 701/702 has 3 wires of different color (Red, Yellow, and Black), now please follow the steps below with the reference of the picture on the right


- Switch off power
- Unplug existing white wire, and connect white wire with the [Red] wire of MK receiver
- Plug in [Black] and [Yellow] wires of receiver as shown in the photo
- Plug in white wire back
- Switch power on

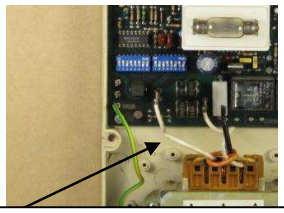

1. un-plug White wire to join with [Red] wire

2. [Red] wire with white together plug back

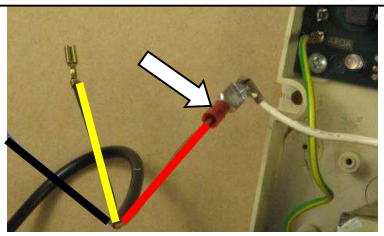

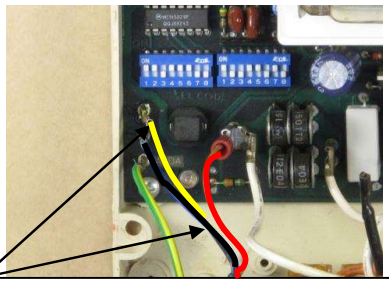

3. Plug in [Black] and [Yellow] wire to pins

(Note: you don't need to do anything with the existing yellow/green wire at all)

Now you have successfully installed the receiver of Gliderol 701/702, try to use the new remote.

Storing Transmitter Coding (Note: This unit has been pre-coded already, this is for future need)

1. Press LEARN button on Receiver once, the Signal LED will be on
2. Press one button of the transmitter (any one you want to control the door), Signal LED will be off
3. Press the same button of the remote again, LED will be flashing
   When the LED stops flashing, the coding sequence is complete.

Delete coding

Press and hold LEARN button on the receiver for about 10 sec, all the coding are removed.