


MK601/602 INSTRUCTION

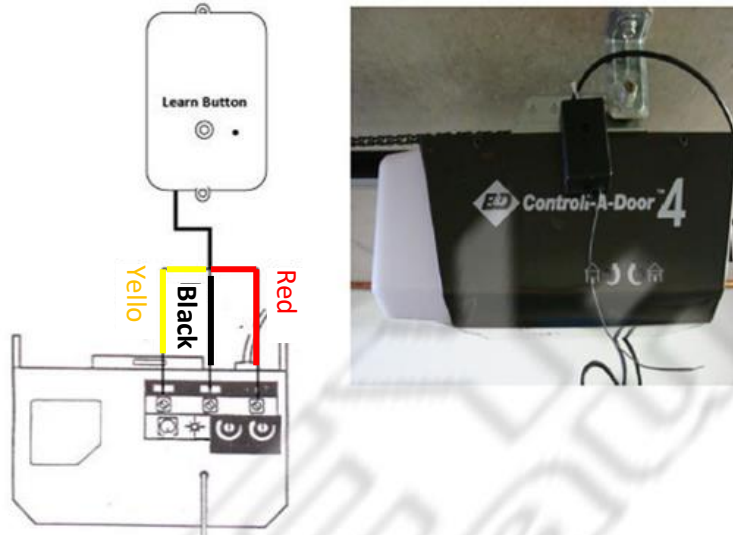

There are 3 wires of different color need to be connected to the back of the power head.

The remote of the conversion kit has been programmed for you already.

What you need to do is just "connect and play". Your original remotes will still be working fine.

Storing Transmitter Coding (Note: This unit has been pre-coded before send for quality testing)

1. Press LEARN button on Receiver once, the Signal LED will be off
2. Press one button of the transmitter (whichever one you want to control the door), Signal LED will be on
3. Press the same button of the remote again, LED will be flashing
When the LED stops flashing, the coding sequence is complete.

Delete coding

Press and hold LEARN button on the receiver for about 10 sec, all the coding are removed.