



## Superlift702 Superlift701 receiver kit instruction

[www.mkey.com.au](http://www.mkey.com.au) 5.01.2016

1. Switch power off
2. Take the light cover off the door opener, then maybe you need also take off the right hands side light globe(depend on different machine)
3. You will see a penal with 7 screws or 4 screws(depend on different machine), please do the connection differently as below



Take of the cover, the screw terminals will be

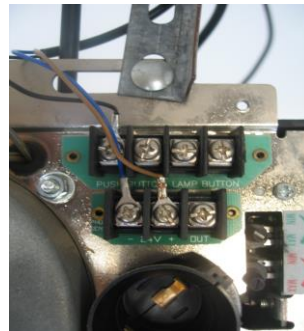

The 7 screws **might be marked** PUSH, BUTTON, LAMP, BUTTON, 24+, 24-, OUT  
**OR** KEY, SWITCH, LAMP, SWITCH, 24+, 24-, OUT

**Please connect respectivelv as below**

**[Red]** connect to 24+

**[Black]** connect to 24-

**[Yellow]** connect to KEY

OR

**[Red]** connect to 24+

**[Black]** connect to 24-


**[Yellow]** connect to PUSH

If your machine only has 4 ternimals marked PUSH, BUTTON, PHOTO, BEAM,  
Then please connect as below

**[Red]** to 24+

**[Black]** to BUTTON

**[Yellow]** to PUSH

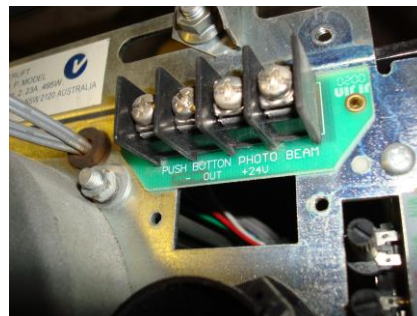

4. After the connection, now you can switch power on
5. Now you can try to use the new remote

### **Storing Transmitter Coding (Note: This unit has been pre-coded before send for quality testing)**

1. Press LEARN button on Receiver once, the Signal LED will be on
2. Press one button of the transmitter (the one you want to control the door), Signal LED will be off
3. Press the same button of the remote again, LED will be flashing  
When the LED stops flashing, the coding sequence is complete.

### **Delete coding**

Press and hold LEARN button on the receiver for about 10 sec, all the coding are removed.